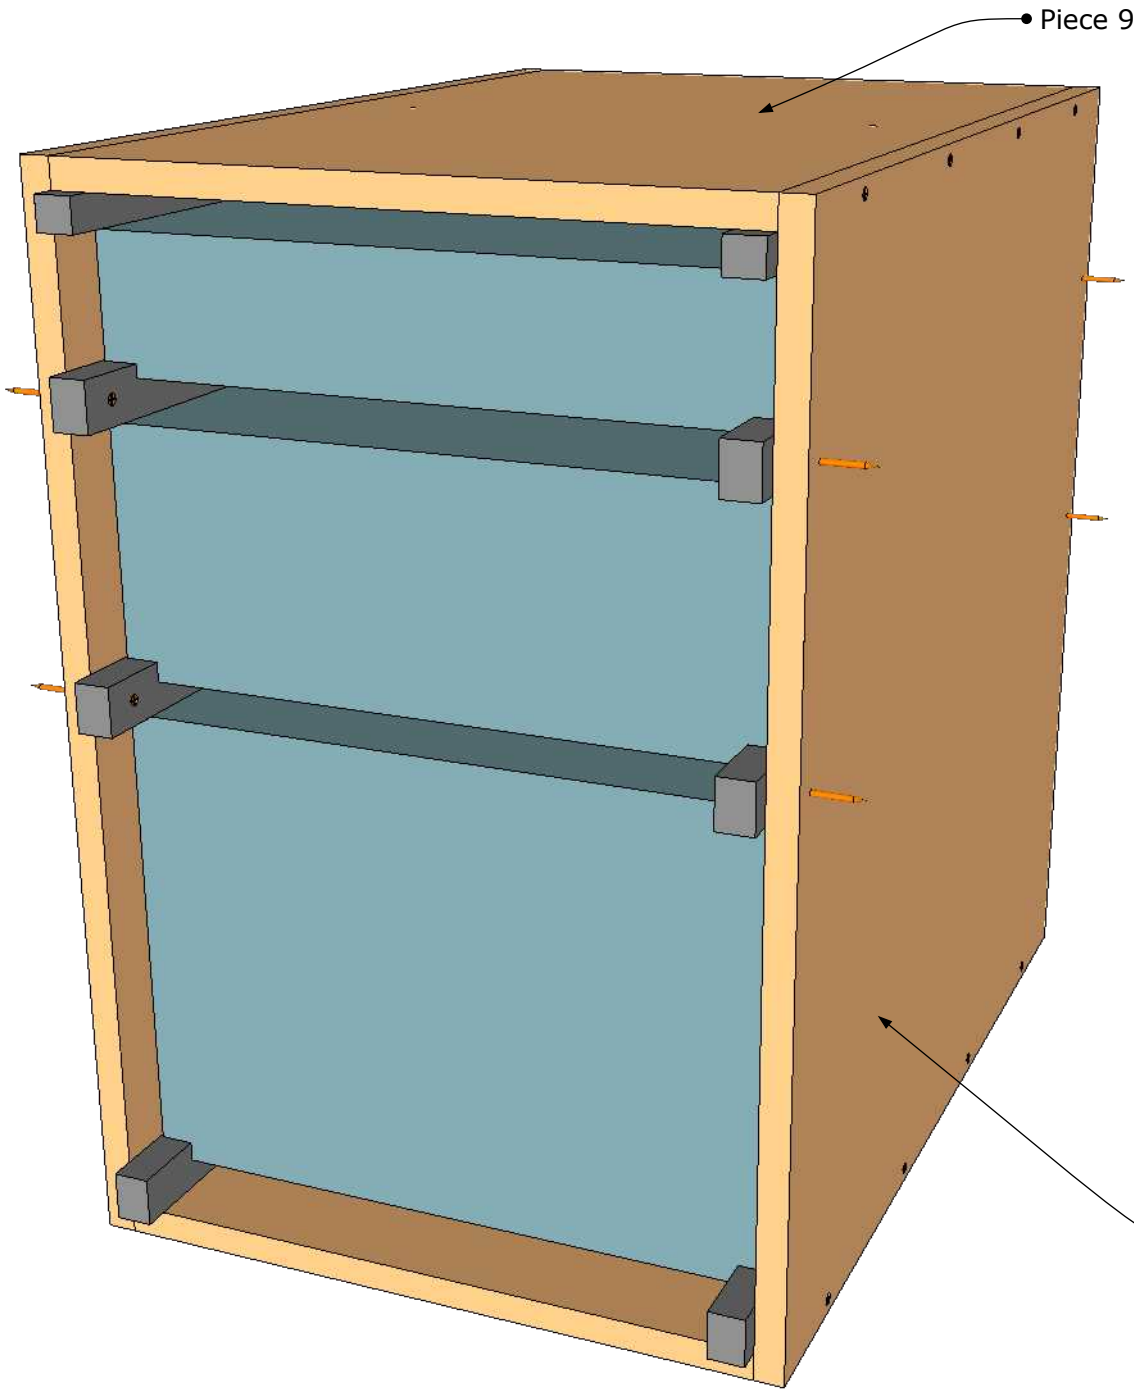


To use the Eurobox, the bench must be at least 620mm deep, instead of 600mm. This way the drawer will be flush with the front of the bench.

If you want, you can make it deeper, like in my case. Add the difference to the measurement "584mm" of pieces 8 and 9. In my case, you can see in these plans that they are 634mm. This way, my bench has a total depth of 670mm. To this depth you must add the tool holder, if you are going to install it.

Pieces with reference n.9 are 2mm wider, to have more space for the boxes. So I've eliminated that gap that was between the two interior cabinets.

These are the new dimensions of the pieces n.8 and n.9 for a depth of 620mm:

Piece 8 - 646 x 584 mm
Piece 9 - 584 x 402 mm

I've used the following Euroboxes:

40x60x29cm
40x60x15cm
40x60x8cm

www.paoson.com


PROJECT NAME: Modular Workbench Eurobox Version

Page description: Wooden Guides

REV: 03/09/2023

The information contained herein is considered proprietary. Transmital to unauthorized parties without explicit permission of the authoring party is not permitted.

Drawn by: Suso Caamanho

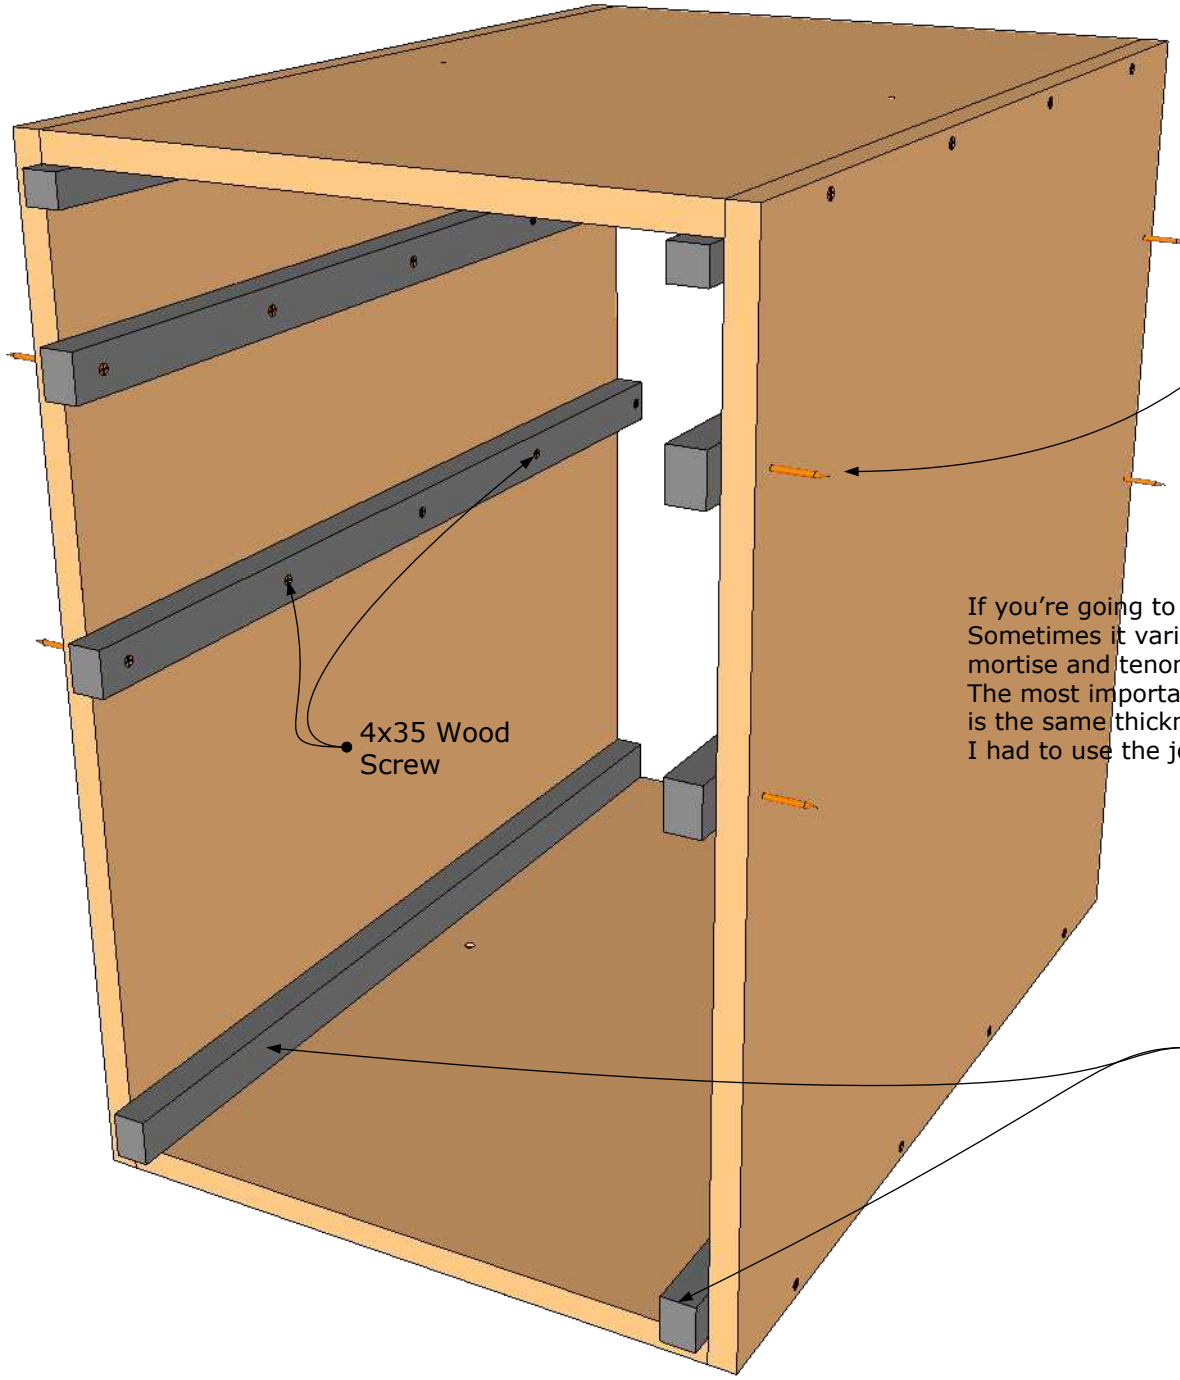

If you're going to use OSB board, do check the thickness of each board. Sometimes it varies a little, and can affect the functioning of mortise and tenon joints.
The most important thing is that the middle piece of each frame part is the same thickness. In this sheet it would be piece no. 2.
I had to use the jointer to even out the thickness of some pieces.

www.paoson.com


PROJECT NAME: Modular Workbench Eurobox Version


Page description: Wooden Guides

REV: 03/09/2023

The information contained herein is considered proprietary. Transmital to unauthorized parties without explicit permission of the authoring party is not permitted.

Drawn by: Suso Caamanho

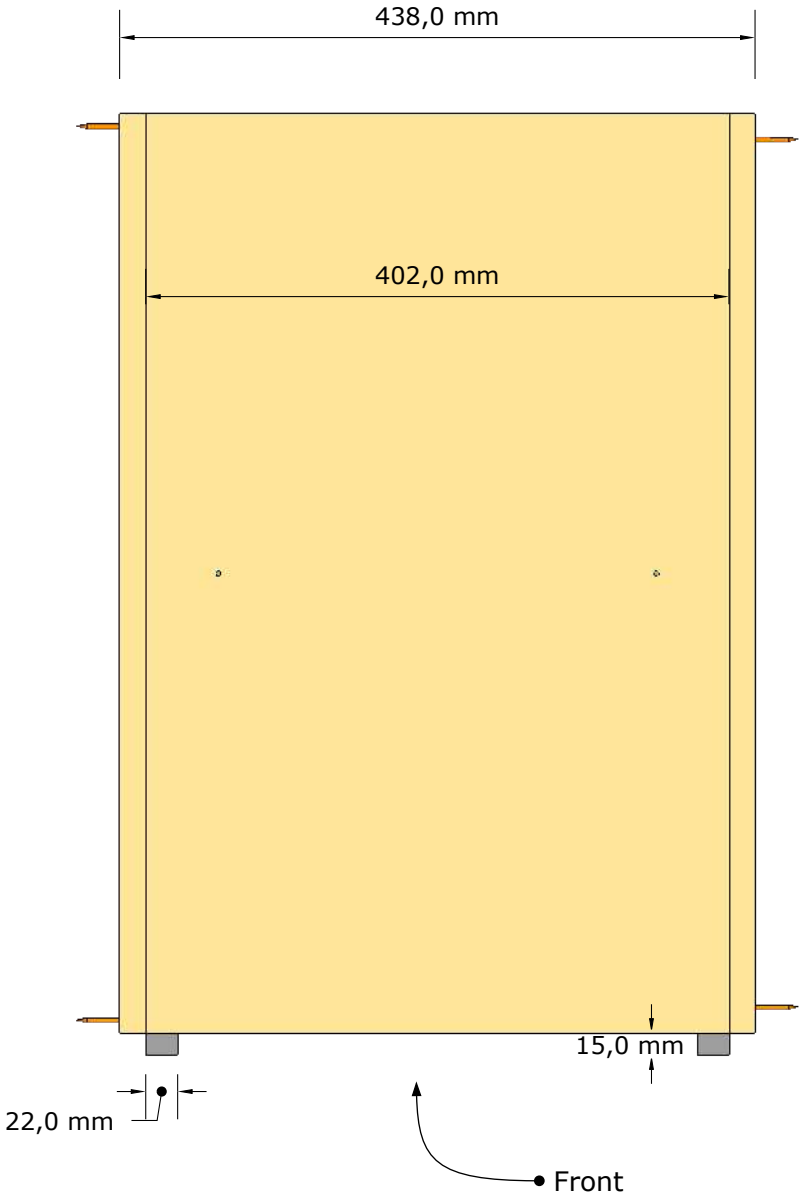

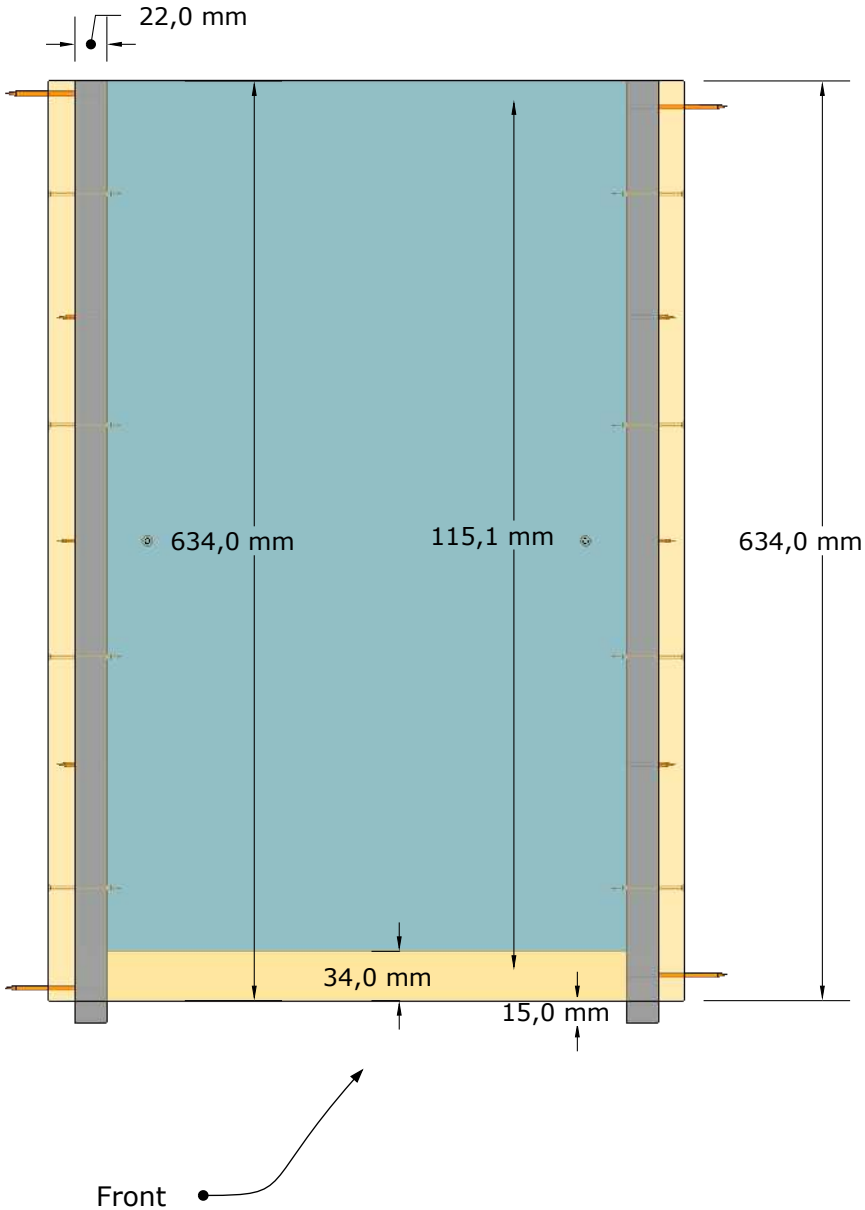

www.paoson.com


PROJECT NAME: Modular Workbench Eurobox Version

Page description: Wooden Guides

REV: 03/09/2023

The information contained herein is considered proprietary. Transmital to unauthorized parties without explicit permission of the authoring party is not permitted.

Drawn by: Suso Caamanho

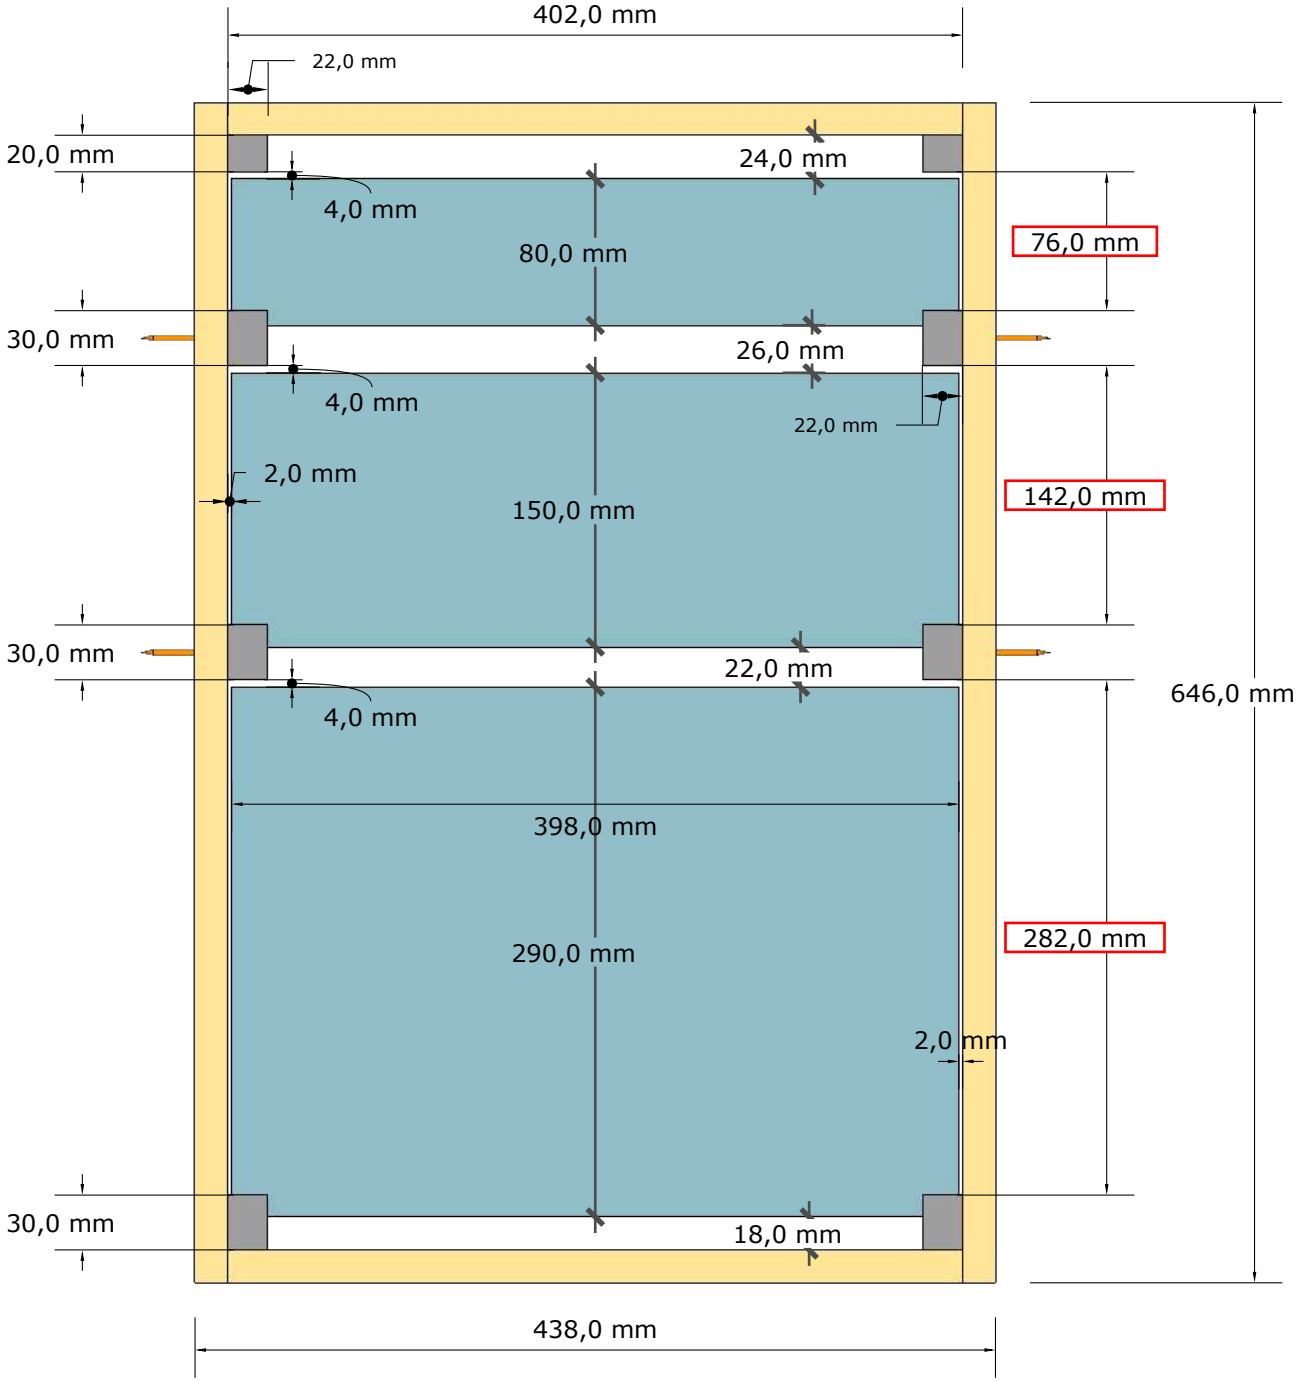

Measures of the spacers templates in red

www.paoson.com

PROJECT NAME: Modular Workbench Eurobox Version


Page description: Wooden Guides

REV: 03/09/2023

The information contained herein is considered proprietary. Transmital to unauthorized parties without explicit permission of the authoring party is not permitted.


Drawn by: Suso Caamanho

Leg side slider

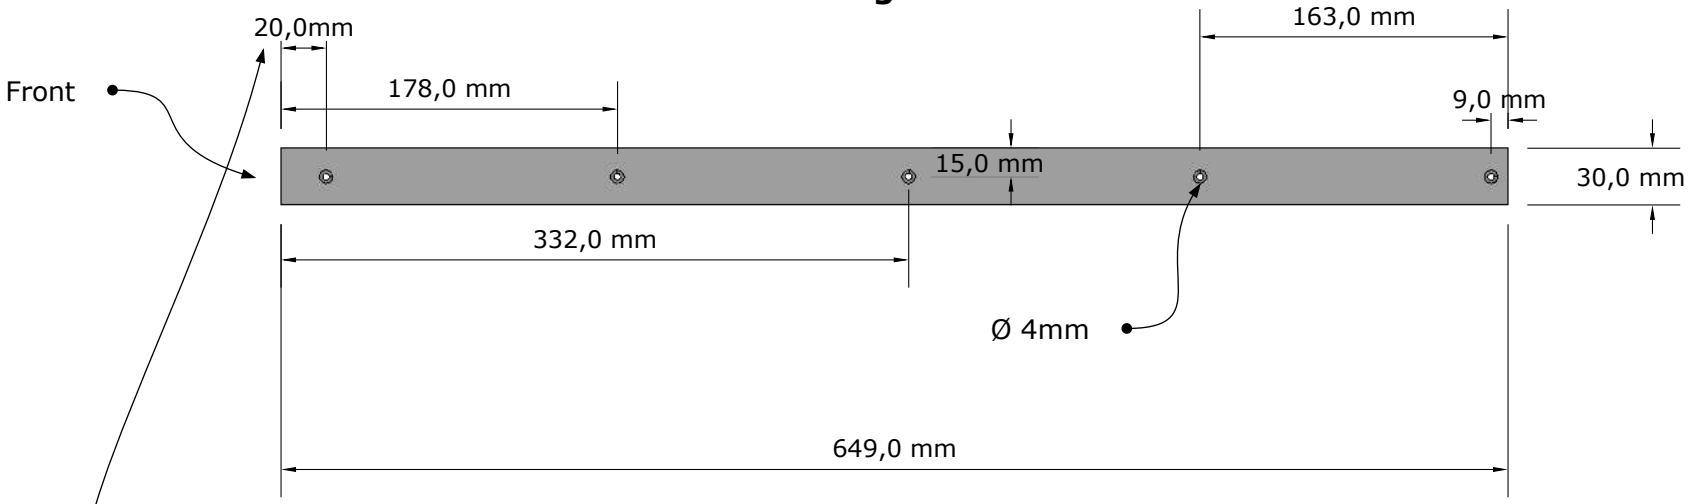

If you are also going to install
the threaded rod to be able to adjust
the wheel from above, this hole should be 20mm

Middle workbench slider

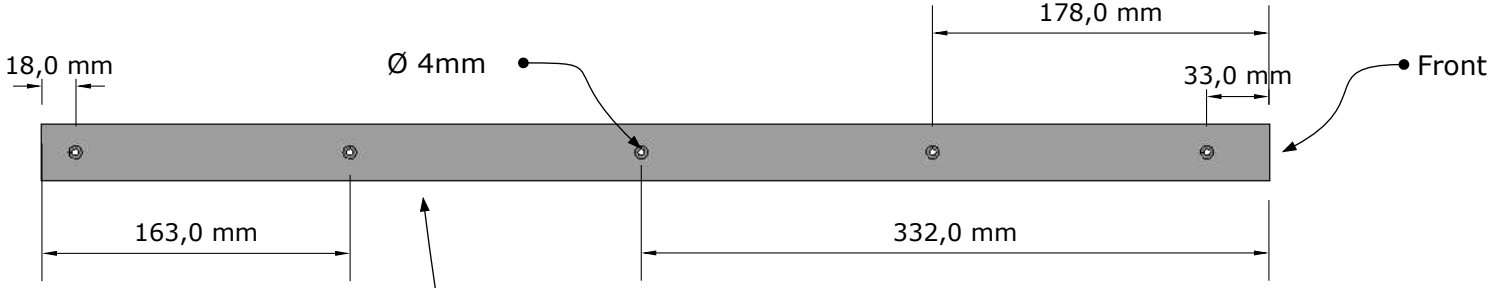

Move all the holes in half of the sliders 5mm in one direction,
so that they do not match those of the other cabinet.
This way you can use longer screws, about 50mm.

www.paoson.com

PROJECT NAME: Modular Workbench Eurobox Version

Page description: Wooden Guides

REV: 03/09/2023

The information contained herein is considered proprietary. Transmital to unauthorized parties without explicit permission of the authoring party is not permitted.

Drawn by: Suso Caamanho